

Character Dial Instructions



ID3016 ID Tag Imprinter

Caution: Table is under tension when pushed all the way to the right.

Character Dial Installation – Install before using imprinter for the first time

- Remove table limit screw.
- Remove escapement wheel screw and washer, place escapement wheel on axle and replace screw and washer.
- Slide table onto the tool from the left and slide all the way to the right. Replace table limit screw.
- Remove screw from center of ram assembly and slide character wheel and dial washer into place. Replace screw.

Character Dial Replacement

- Remove screw in center of dial and take dial and knob assembly off. Slide table to extreme right and remove table limit screw.
- To safely return table to the left, hold table to the right and push spacer button to allow table to move slowly to the left and expose spacing mechanism.
- Remove escapement wheel screw, dial washer and escapement wheel and replace with parts from kit.
- Move table all the way to the right and reassemble table limit screw.

Dial Kits:

Dial kits come complete with dial wheel, escapement wheel, and dial washer.

| Catalog Number | Description |
|----------------|-----------------------|
| ID3816 | 1/16" Letter Dial Kit |
| ID3906 | 3/32" Letter Dial Kit |
| ID3826 | 1/8" Letter Dial Kit |
| ID3836 | 3/16" Letter Dial Kit |
| ID3846 | 1/4" Letter Dial Kit |

