
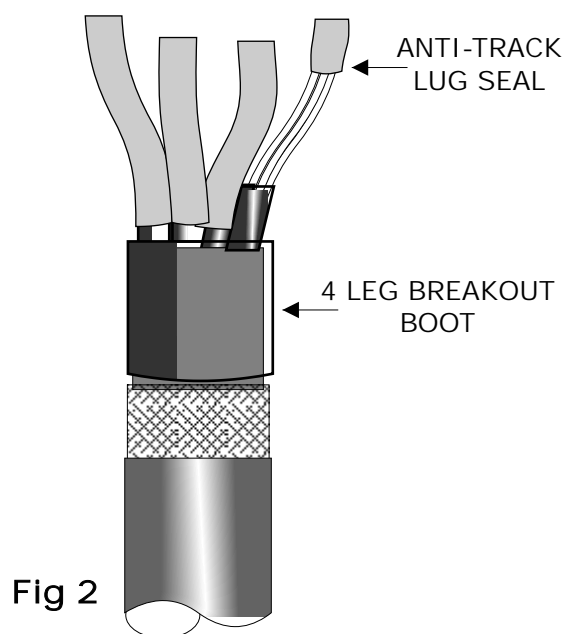


SUPPLEMENT I INSTRUCTION PANZERFLEX POWER CABLE WITH 3 x MAIN CORES PLUS EARTH CORE/S

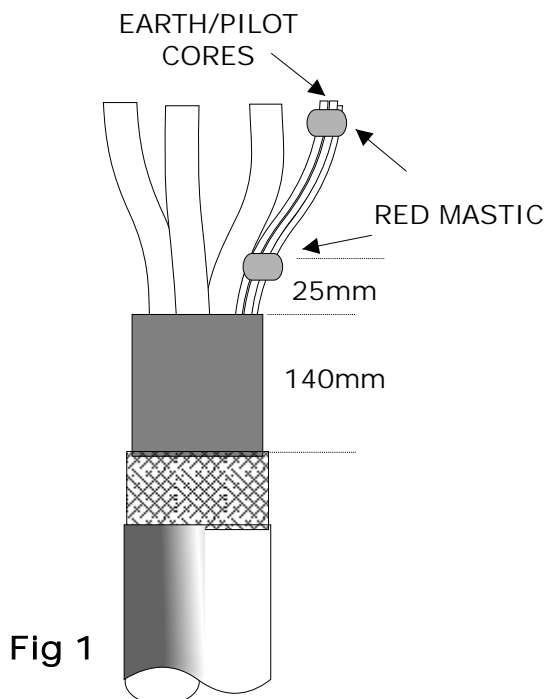


STAGE 1 Strip the Cable Bedding to approx 140mm. It is not necessary to applied Red Tape to the Bedding as the Breakout Boot is adhesive lined.

STAGE 2 Wrap the Red Mastic Tape in and around each Earth Core/s and any Pilot Cables to form a moisture block. The Tape should be applied at the Core end/s so that the short Red Lug Seal fits on top and also approx 25mm up from Inner Bedding as shown to create a moisture block within the leg of the Breakout Boot (See Fig 2).

STAGE 3 Each Core of the three main Cores should be passed through three of the legs of the Breakout Boot. The Earth Core/s should be taken through the fourth leg.

STAGE 4 Refer to main Instruction Sheet for cable preparation before fitting the appropriate Anti-Track Tubes.

Notes: If Cable has Fibre Optic Cores, these should be enclosed within a flexible Plastic Conduit and passed through the remaining leg of the 5 Core Breakout Boot (See Fig 3).

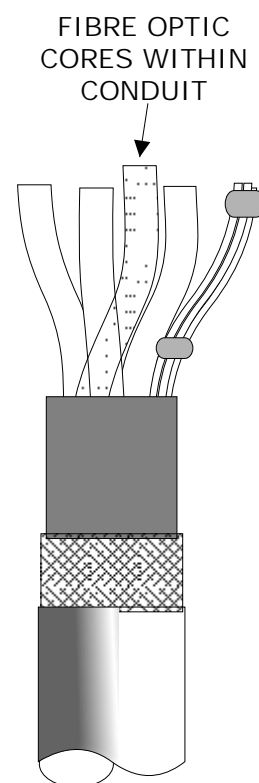

Some kits have Anti-Track Lug Seal only for Earth Cores, others may contain full Anti-Track Tube to cover the Earth Cores.