


CRE6 - Cable to Rebar

A mm	B mm ²	Weld Powder	Mould	Handle Clamp
10 - 40	16	WEP 045	CRE6-C-16	HCC 002
	25		CRE6-C-25	
	35		CRE6-C-35	
	8mm Ø	WEP 065	CRE6-C-8SC	
	50		CRE6-C-50	
	70	WEP 090	CRE6-C-70	
	95		CRE6-C-95	
	120		CRE6-C-120	
	150	WEP 150	CRE6-C-150	
	185		CRE6-C-185	
	240	WEP 200	CRE6-C-240	
	300		CRE6-C-300	

To safely and effectively weld cable to rebar some form of mould packing must be used. Preformed ceramic fibre packing (part no. PAK001) or Duxseal (Part no. DXS001) can be used for this purpose.

CRE17 - Cable to Rebar

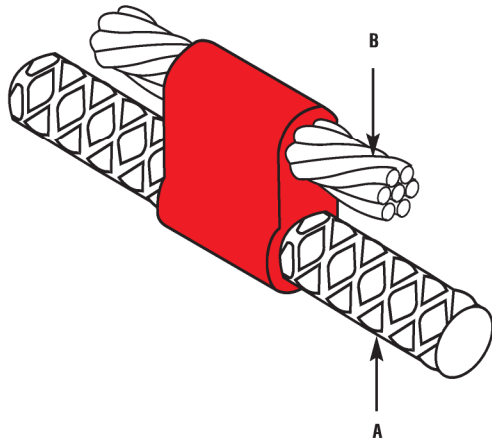

A mm	B mm ²	Weld Powder	Mould	Handle Clamp
10 - 40	16	WEP 045	CRE17-C-16	HCC 004
	25		CRE17-C-25	
	35		CRE17-C-35	
	8mm Ø	WEP 090	CRE17-C-8SC	
	50		CRE17-C-50	
	70		CRE17-C-70	
	95		CRE17-C-95	
	120		CRE17-C-120	
	150	WEP 150	CRE17-C-150	
	185	WEP 250	CRE17-C-185	
	240	2 X WEP 150	CRE17-D-240	HCD 004
	300		CRE17-D-300	

To safely and effectively weld cable to rebar some form of mould packing must be used. Preformed ceramic fibre packing (part no. PAK001) or Duxseal (Part no. DXS001) can be used for this purpose.