





Shrink Polymer Systems

Cable Installation Materials – 24 volts to 36 kV


INSTALLATION INSTRUCTION JOINT KIT TO SUIT 2 CORE UNSCREENED DATA LINK CABLE TO BR 1932 (DEC 1987) REF. NO. SPS 107 BR CAT. NO: 54/37079

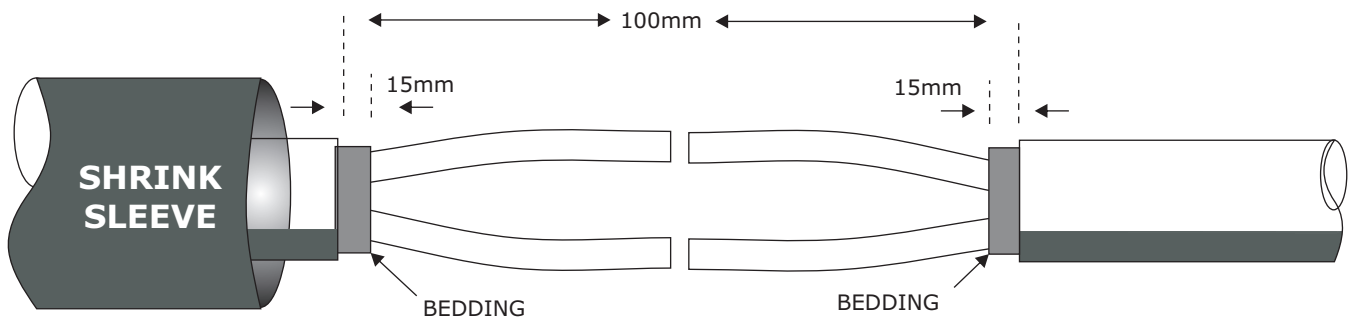

1. Prepare Cable to the dimensions shown above.
2. Slide the Outer Shrink Sleeve onto one of the cable ends.

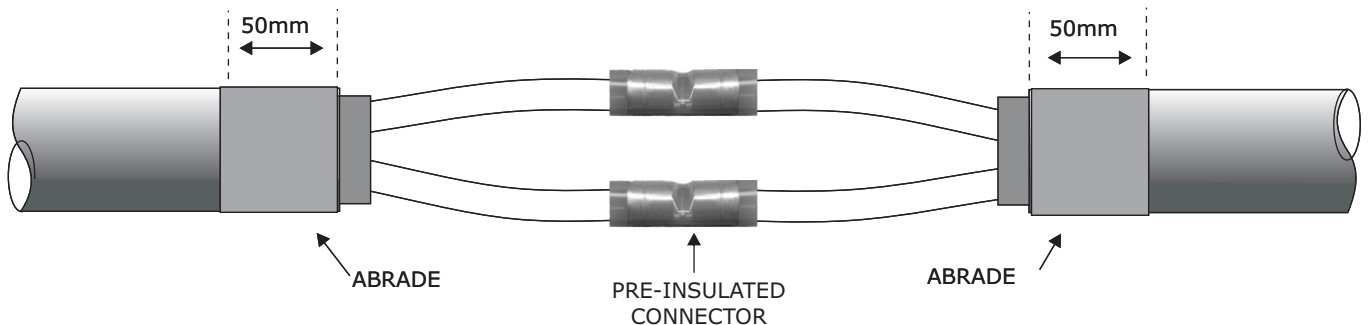

3. Crimp the Red Pre-Insulated Connectors provided with an approved Tool.
4. Abrade the Outer Cable Sheath for a distance of approx 50mm at each end.

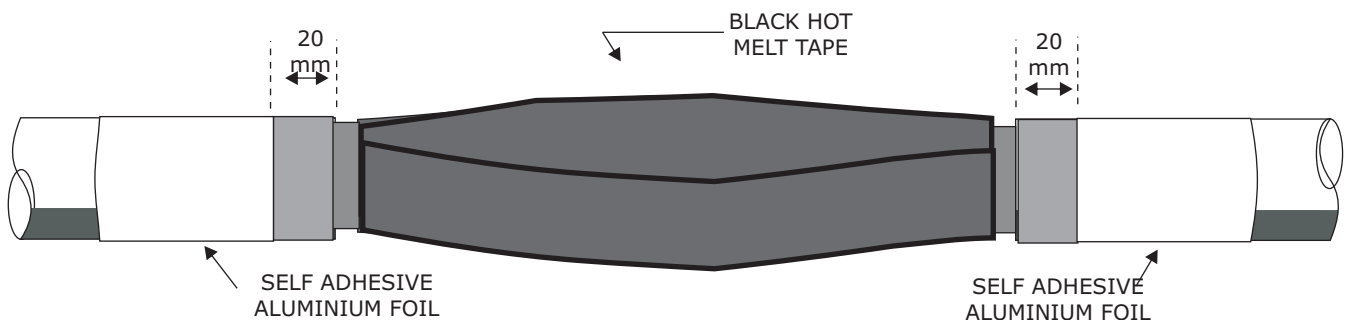

5. Wrap the Black Hot Melt Tape around the Conductors to cover the joint gap as shown above.
6. Remove the backing paper from the two cut lengths of self adhesive Aluminium Foil and apply to Cable Sheaths as shown.



7. Clean and de-grease the Cable Sheath both sides with the Tissue provided within the kit.
8. Position the Outer Shrink Sleeve centrally over the joint gap. With a suitable heat source shrink the Tube in an even manner from the centre to one end at a time. Sealant should be visible at Tubes ends.
9. Allow the completed Joint to cool before applying any mechanical strain.



WWW.CABLEJOINTS.CO.UK
THORNE & DERRICK UK
TEL 0044 191 490 1547 FAX 0044 477 5371
TEL 0044 117 977 4647 FAX 0044 977 5582
WWW.THORNEANDDERRICK.CO.UK

