

Application of BAND-FAST™ Clamps using Manual Tools



1. Pass band around product and through sealing clip




2. Tension using Manual Tensioner (Ref G402 for 32mm wide clamps, Ref C001 or C003 for 19mm wide clamps).



3. Once desired tension is achieved, apply Manual Sealer (Ref X80302 for 32mm / Ref X80307 for 19mm) to sealing clip.



4. Crimp sealing clip.

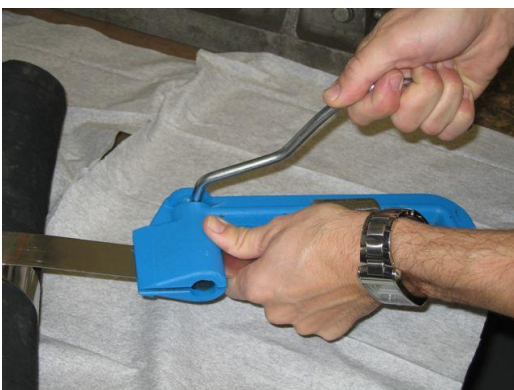

5. Cut off excess tail using cutter lever.



6. Fold tail back under towards clip to shield sharp edge.

In the interests of good health & safety practice, suitable safety clothing should be worn during the installation of clamps.